



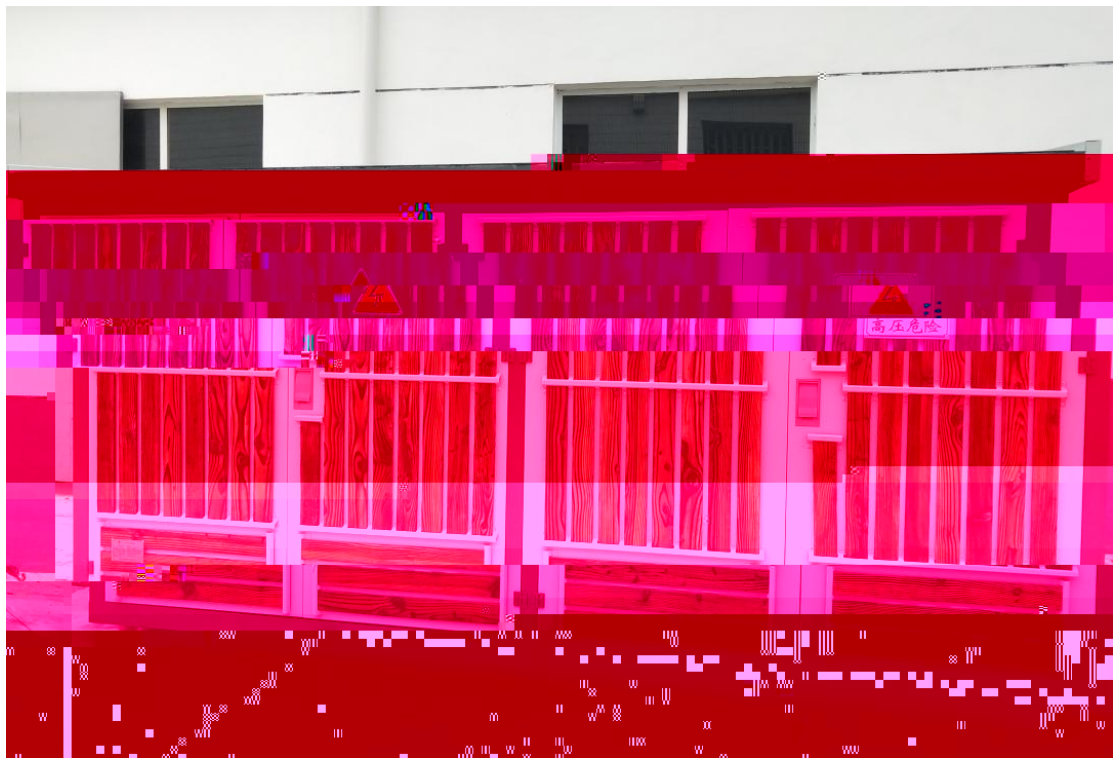

()

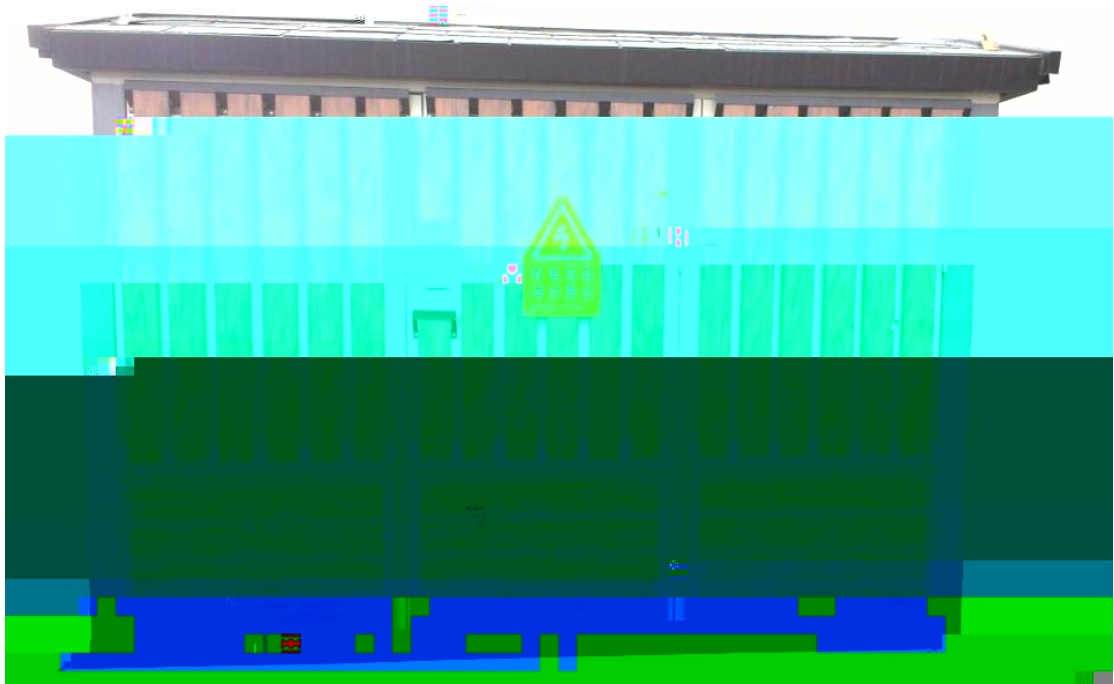



1

HSM26-12

304

:

+

2

GB311.1-1997	
JB/T 10840-2008	
GB763-1990	
GB/T1984-2014	
GB/T1985-2014	
GB3804-2005	3.6 40.5
GB/T3906-2020	3.6 kV 40.5kV
GB3309-1989	
GB4768-2008	
GB/T11022-2011	
GB13384-2008	
DL403-2000	12kV 40.5kV
DL404-2007	3.6 kV 40.5kV
DLT539-2016	

3

H SM 26- 12 □ / T □ - □

e



			≤	≤	
			≤	≤	

6

Q

Q 9 b7d

Q • 8204 X


7



8



8&

05

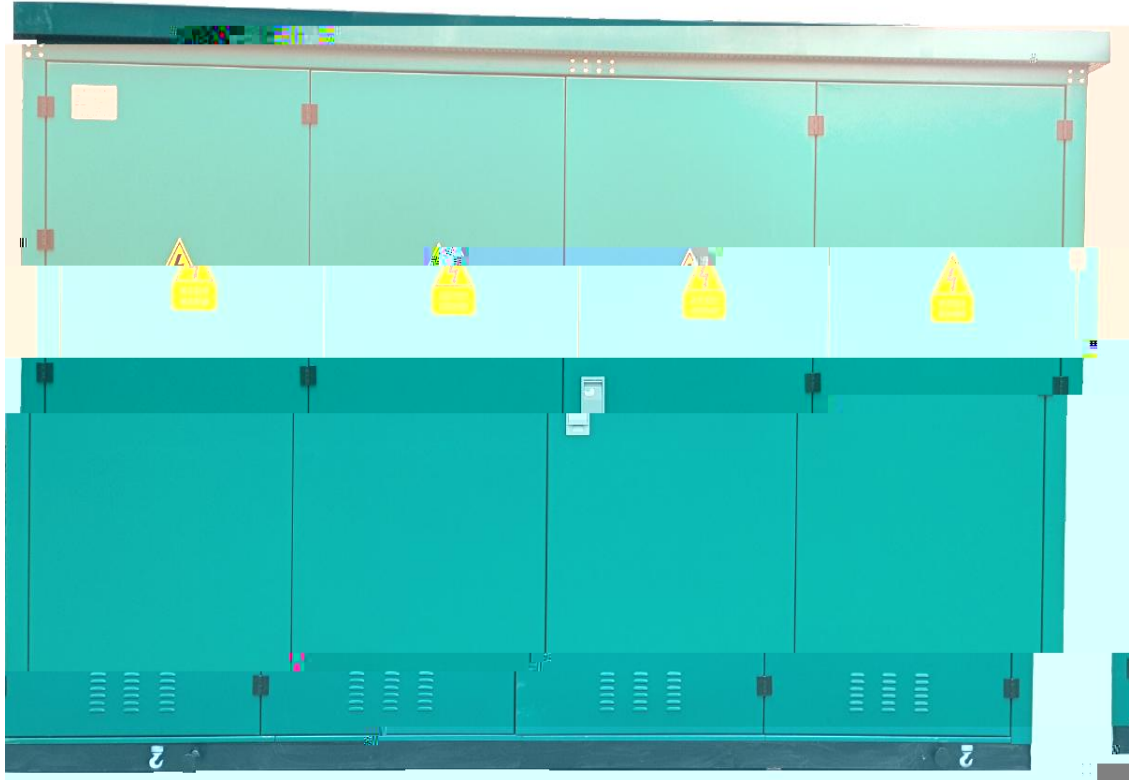




9

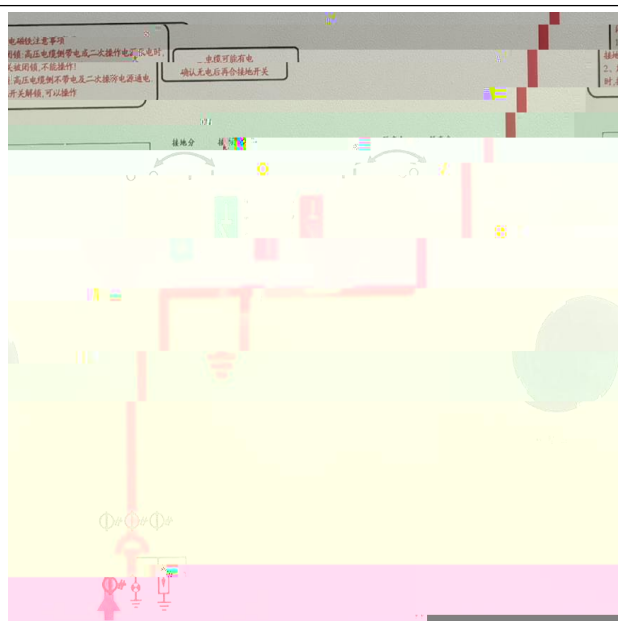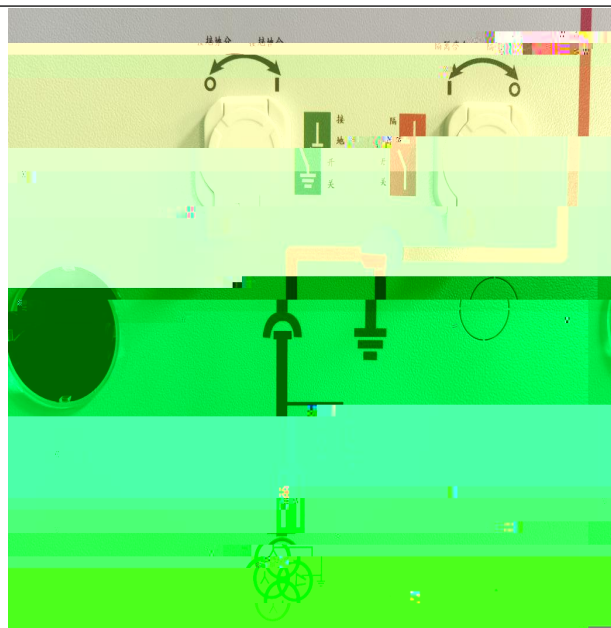





1.3 (图3) 安装冷缩三指套：将冷缩三指套套入电缆的三叉根部，对其大端口下的外护套表面清洁后包贴一层填充胶，并夹包住地线。

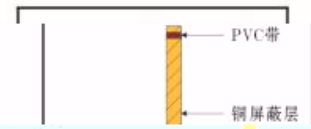


大。应设计将引至支架处引出，无设支架者，则三指套应穿至引至充胶。然后按同样方法分别完成另外两相，用PVC胶布对大端口进行密封。

注意：根据设备位置、尺寸及所需形式将三相指套封好。

确保三指套指套端子孔与设备端子孔能有效对中。

1.4 剥除外护套及铠装层：剥除外护套及铠装层。

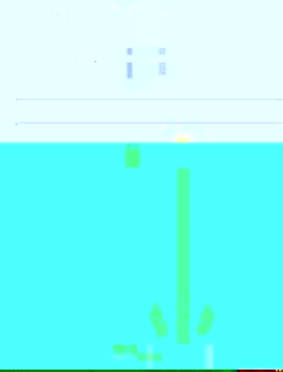

用砂布抛光至无痕，半导电层与芯绝缘处做10mm斜面。部分

注：剥除外护套、铠装层、半导电层时，需用PVC胶布包裹固定，以免损伤电缆芯，造成绝缘层剥离。

3 贴半导电带(图4)



注：绝缘层厚度为1mm，绝缘层厚度为1-2mm。

将半导电带贴在绝缘层表面，使其完全覆盖绝缘层。

半导电带贴好后一定要特别平整，使其与绝缘层紧密贴合，无气泡。





前接头与后接头(后接头避雷器) 装配顺序示意(多分支重复安装后接头)



图9


装配时的常见错误

1. 应力锥下移50mm, 导致应力锥与导体接触不良, 造成局部放电。

图10 应力锥下移50mm, 导致应力锥与导体接触不良, 造成局部放电。



图11 应力锥下移50mm, 导致应力锥与导体接触不良, 造成局部放电。



图12 应力锥下移50mm, 导致应力锥与导体接触不良, 造成局部放电。

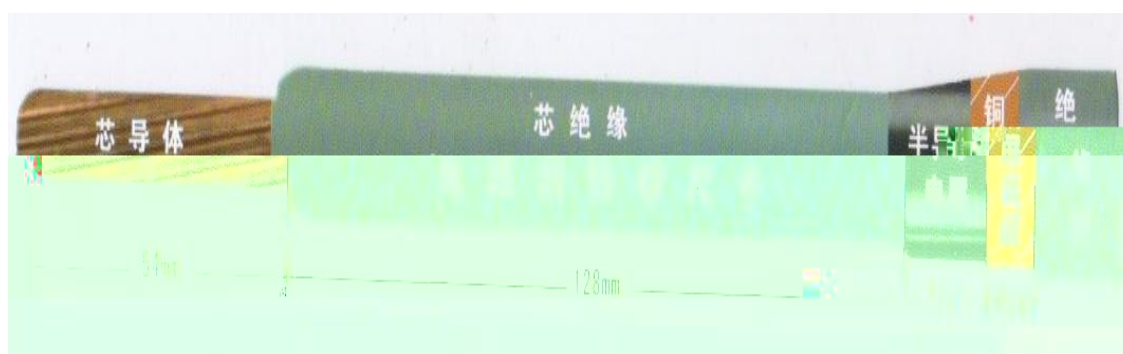



10

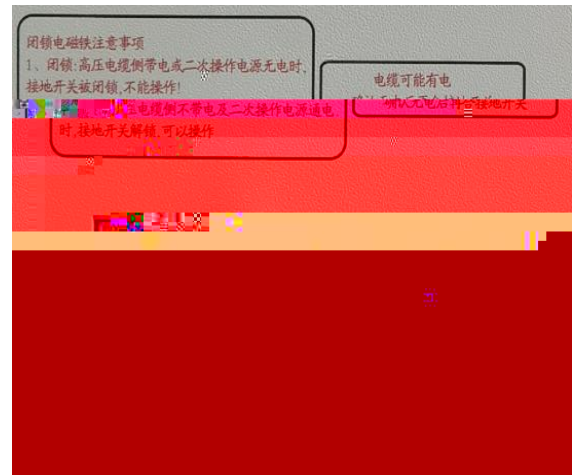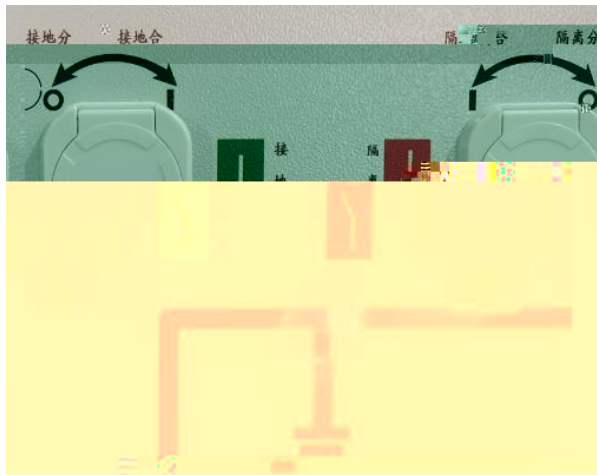

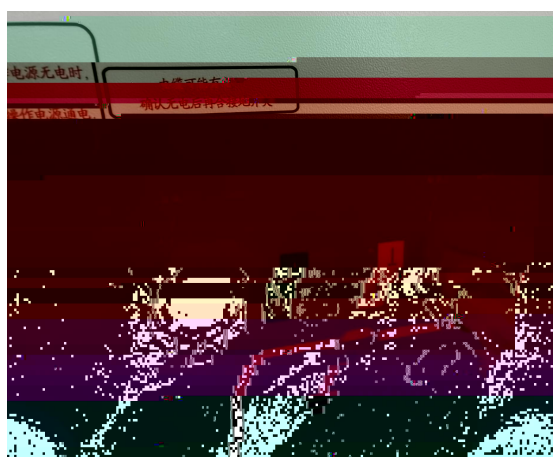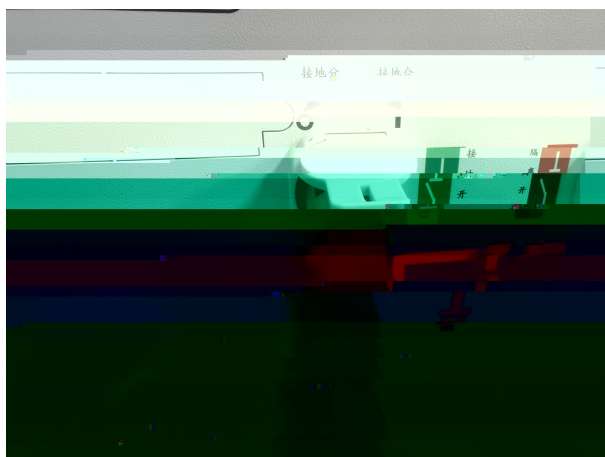



V



图式思维示意图

